



SERVICE

## FLAT RATE TIMES FOR REPAIR TASKS (Chassis)

**NSU PRIMA 150 cc**  
Standard Times / Page 1  
Edition VIII. 1956

### Wheels, Brakes, and Forks

F 01	Remove and fit front wheel . . . . .
F 02	Remove and fit rear wheel . . . . .
F 03	Remove and fit ball bearing and seal in hub . . . . .
F 04	Remove and fit front brake back plate . . . . .
F 05	Remove and fit rear hub . . . . .
F 08	Renew brake linings (each brake). Strip and assemble brake . . . . .
F 09	Remove and fit speedometer drive . . . . .
F 20	Remove and fit front forks . . . . .
F 21	Remove and fit bearing shells, races, and balls . . . . .
F 22	Remove and fit front fork springs . . . . .
F 24	Remove and fit pivoted links (left-hand and right-hand) . . . . .
F 25	Replace bushes in pivoted links . . . . .
F 26	Remove and fit front mudguard . . . . .
F 27	Remove and fit bumper . . . . .
F 30	Remove and fit fork cowling . . . . .

### Controls and Bowden Cables

F 40	Remove and fit handlebars (with fittings) . . . . .
F 41	Remove and fit handlebar bend . . . . .
F 42	Remove and fit speedometer . . . . .
F 43	Remove and fit speedometer drive shaft . . . . .
F 44	Remove and fit control levers . . . . .
F 45	Remove and fit throttle twistgrip . . . . .
F 46	Remove and fit gearchange twistgrip . . . . .
F 47	Remove and fit twistgrip or dummy grip sleeve . . . . .
F 48	Remove and fit slider in twistgrip . . . . .
F 50	Remove and fit clutch cable . . . . .
F 51	Remove and fit front brake cable . . . . .
F 52	Remove and fit cable for gearchange locking mechanism . . . . .
F 53	Remove and fit throttle cable . . . . .
F 54	Remove and fit gearchange cable . . . . .
F 55	Remove and fit cable for strangler and for operating tickler . . . . .

### Frame

F 60	Remove and fit frame . . . . .
F 61	Remove and fit front central section of panelling . . . . .
F 62	Remove and fit rear mudguard . . . . .
F 63	Remove and fit rear central section of panelling . . . . .
F 65	Remove and fit rear shock absorber . . . . .

Time for task (hrs)	Additional work required	Total time (hrs)
Temps unitaire (heures)	Travaux supplémentaires nécessaires	Temps total (heures)
Tijd (uur)	Benodigde extrawerkzaamheden	Totaaltijd (uur)
¼	—	¼
¼	—	¼
¼	F 01, F 04	¾
¼	F 01	½
¼	F 02	½
½	F 01, F 04 or F 02, F 05	1 1
½	M 52, F 02, F 05	2
¾	F 01	1
½	F 01, F 20, F 30	1¾
¼	F 01	½
	F 01, F 22	½
¾	F 01, F 24	1¼
¼	F 01, F 20	1¼
¼	—	¼
	E 13	½
	F 51, F 53, F 50, F 54 E 13, E 05	¾
¼	F 46, F 40, E 10	1
¼	—	¼
1 ¼	F 83, F 30, E 16, E 19	2¼
¼	—	¼
¼	—	¼
¼	—	¼
¼	—	¼
¼	F 45	½
½	E 13, F 30	1
½	E 13, F 30	1
¼	—	¼
¼	F 48, F 45, F 30	1
1	F 46, F 30	1½
½	E 13, F 30	1
	M 01, F 01, F 20, F 21, E 13, F 30, F 46, F 50, F 51, F 52, F 54, F 55, F 71, F 72, E 09, F 61, F 90, F 80, F 63, E 19, E 15, E 16	14
¼	F 71, F 72,	¾
¼	F 02	½
½	F 61, E 09, F 71, F 72	1 ½
¼	—	¼



SERVICE

**FLAT RATE TIMES  
FOR REPAIR TASKS  
(Chassis)**

**NSU PRIMA 150 cc**  
**Standard Times / Page 2**  
Edition VIII. 1956

- F 67 Remove and fit rear springing . . . . .
- F 68 Remove and fit bearing pin and bush . . . . .
- F 70 Remove and fit exhaust system . . . . .
- F 71 Remove and fit pillion saddle . . . . .
- F 72 Remove and fit saddle . . . . .
- F 73 Remove and fit prop stand . . . . .
- F 74 Remove and fit central stand (and return spring) .
- F 76 Remove and fit tool box . . . . .
- F 80 Remove and fit fuel tank . . . . .
- F 82 Remove and fit fuel tap and filter . . . . .
- F 83 Remove and fit legshield edge strips, left-hand and right-hand . . . . .
- F 90 Remove and fit legshield . . . . .
- F 91 Remove and fit footrests, left-hand and right-hand

**Electrical Installation**

- E 01 Horn lead . . . . .
- E 02 Rear-light lead . . . . .
- E 03 Battery lead . . . . .
- E 04 Lighting lead . . . . .
- E 05 Remove and fit dip-switch lead . . . . .
- E 06 Remove and fit horn . . . . .
- E 07 Remove and fit fuel gauge tank unit . . . . .
- E 09 Remove and fit reflector and rear light . . . . .
- E 10 Remove and fit dip switch . . . . .
- E 12 Remove and fit headlamp glass and reflector . .
- E 13 Remove and fit headlamp . . . . .
- E 14 Remove and fit stop light switch . . . . .
- E 15 Remove and fit one battery . . . . .
- E 16 Remove and fit battery box . . . . .
- E 18 Remove and fit starting, lighting, and ignition switch . . . . .
- E 19 Remove and fit instrument panel . . . . .

} Remove and fit cable harness

Time for task (hrs)	Additional work required	Total time (hrs)
Temps unitaire (heures)	Travaux supplémentaires nécessaires	Temps total (heures)
Tijd (uur)	Benodigde extrawerkzaamheden	Totaaltijd (uur)
3/4	F 02, F 05	1 1/4
1/4	F 02, F 05, F 67	1 1/2
1/2	—	1/2
1/4	—	1/4
1/4	—	1/4
1/4	—	1/4
1/2	—	1/2
1/4	—	1/4
1/4	F 76	1/2
1/4	—	1/4
1/4	—	1/4
1 1/4	F 30, E 15, E 16, E 19, F 83	2 3/4
1/2	—	1/2
1 1/4	F 30, E 18	2 1/4
1/4	E 10, E 13	3/4
1/4	E 13	3/4
1/4	—	1/4
1/4	—	1/4
1/4	—	1/4
1/4	E 13	1/2
1/4	—	1/4
1/4	—	1/4
1/2	—	1/2
1/4	E 15	3/4
1/2	—	1/2
1/4	F 30, E 15, E 16, E 18, F 42	2